


In Love with the Light?

The benefits of Verilux lighting are available in a range of products — all designed to help you live **life in a better light**:

- **Get Back to Being You**
Products to Improve Skin, Mood, Energy and Well Being
- **Don't Clean, Sanitize**
Wands and Vacuums that Use UV-C Rays to Banish Germs, Odors and other Nasties
- **Productivity Lighting**
Lamps that Use Natural Spectrum Light so You Can Read, Task, Work and Excel
- **Fix Your Fixtures**
Natural Spectrum Bulbs and Tubes to Illuminate Your Home, Work and Life

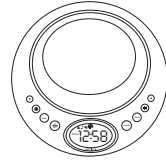


Rise & Shine® Natural Alarm Clock and Sleep System



CleanWave® Sanitizing Wand



Heritage™ Deluxe Natural Spectrum® Desk Lamp

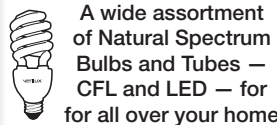

A wide assortment of Natural Spectrum Bulbs and Tubes — CFL and LED — for all over your home

For more information, to order, or to find a retailer near you, visit us at www.verilux.com or call 1-800-786-6850.

Troubleshooting

Before requesting service on your Verilux® lamp, please:

- Make sure all power connectors, cords and plugs are inserted fully and securely.
- Be sure the bulb is securely seated into the socket. (See page 5.)
- Make sure there is power to the wall outlet, or try another one.

PROBLEM	CHECK	SOLUTION
Light Won't Come On	Has the plug come loose?	Insert plug securely into wall outlet.
	Is the bulb old?	Check bulb for blackening/darkening at bottom of spiral where it joins the base (an indicator of bulb life) and replace bulb.
	Is the bulb connected securely into socket?	Be sure the bulb is securely seated in the socket. Repeat the bulb installation process. CAUTION: Always unplug lamp before performing bulb replacement or installation.
Blackening/Darkening at Ends of Bulb	Is the bulb new?	Sometimes when a new bulb is turned on for the first time the tubing will darken, but this will fade after a few minutes.
	Is the bulb old?	With older bulbs, darkening of the tubing indicates end of bulb life. (This doesn't affect operation except to reduce the amount of light available, since the phosphor in that area has become inactive.) Bulb replacement is recommended.
Light Flickers	Has the plug come loose?	Insert plug securely into wall outlet.
	Is the bulb connected securely to the socket?	Be sure the bulb is securely seated into the socket. Repeat the bulb installation process. CAUTION: Always unplug lamp before performing bulb replacement or installation.
	Is the lamp connected to a dimmer switch?	Connect lamp plug only to wall outlet without dimmer switch.

Care and Cleaning

Your lamp is made from high-quality materials that will last for many years with minimum care. You may want to periodically clean the lamp using a mild non-abrasive cleaner and soft cloth. When cleaning, make sure you have turned off and unplugged the unit and allowed sufficient time for the unit to cool.

CAUTION: Do not use solvents or cleaners containing abrasives, or ammonia-based cleaners.

CAUTION: After cleaning the lamp, properly wipe away and dry all moisture before restoring power.

One-Year Limited Warranty

ATTENTION! ONCE OPENED, PLEASE **DO NOT** RETURN THIS PRODUCT TO THE STORE WHERE IT WAS PURCHASED FOR REPAIR OR REPLACEMENT!

Many questions may be answered by visiting www.verilux.com, or you may call our Customer Service Department at 800-786-6850 during normal business hours.

This limited warranty is provided by: Verilux, Inc., 340 Mad River Park, Waitsfield, VT 05673

Verilux warrants this product to be free from defects in material and workmanship for a period of 1 year from the date of the original retail purchase from Verilux or an authorized Verilux distributor. **Proof of purchase is required for all warranty claims.** During the limited warranty period, Verilux Inc., will, at its option, repair or replace defective parts of this product, at no charge to the customer, subject to these limitations: This limited warranty does not include any postage, freight, handling, insurance or delivery fees. This warranty does not cover damage, defect or failure caused by or resulting from accident, external destruction, alteration, modification, abuse, misuse or misapplication of this product.

This warranty does not cover damage to the product resulting from return shipping or handling. Verilux recommends purchasing shipping insurance to protect your investment.

Return Authorization is required for all returns. To obtain a Return Authorization, please contact the Verilux Customer Service Department at 800-786-6850.

If, during the first year of ownership, this product fails to operate properly, it should be returned as specified at www.verilux.com/warrantyreplacement or as instructed by a Verilux customer service representative at 800-786-6850.

Note: Verilux recommends using a quality surge suppressor on all electronics equipment. Voltage variations and spikes can damage electronic components in any system. A quality suppressor can eliminate the vast majority of failures attributed to surges and may be purchased at electronics stores.

Due to ongoing improvements, actual product may have slight variations from the one described in this manual.

Please visit our web site at: www.verilux.com or call

1-800-786-6850

Representatives are available Monday — Friday 9:00a.m to 5:00p.m. EST

VERILUX®

340 Mad River Park, Waitsfield, VT 05673

Replacement Parts

Shop online at www.verilux.com or call Customer Service at 1-800-454-4408.

Natural Spectrum and Productivity


When it comes to maximizing work, study or task time, a Verilux Planet Light lamp is the perfect partner. It uses Natural Spectrum Light that replicates key beneficial wavelengths of natural daylight to help you read faster with greater comprehension, work longer without eyestrain and improve productivity and focus.

Research using Verilux Natural Spectrum Light and comparable lighting in school and work settings resulted in significantly greater visual acuity, enhancing student performance and worker productivity when compared to other light sources.

Natural Spectrum Light is the result of more than 50 years of research to build lighting that meets the needs of the human eye. At home, college or office, your Verilux lamp is the perfect productivity partner.

Shedding Light on Natural Spectrum®


Verilux Natural Spectrum light illuminates in the broader scotopic range to better stimulate the cones and rods (photoreceptors) of the eye. This enhanced stimulation improves visual performance by reducing the size of the pupil to better focus light, relaxing the eye while increasing visual acuity and processing.

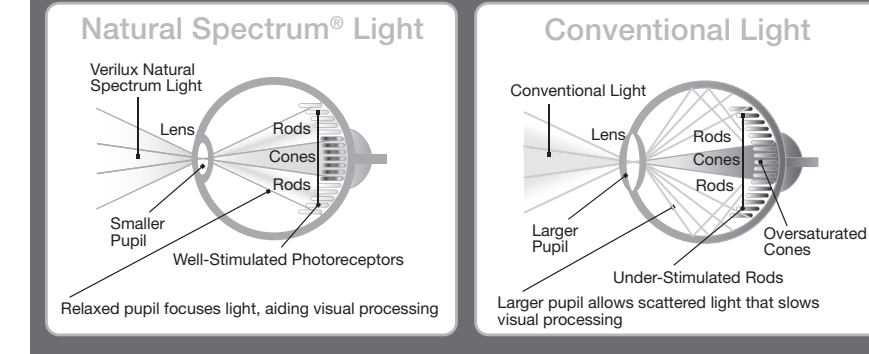

VF02_MAN_AF_Rev1

Made in China
Printed in China for Verilux, Inc.
© Copyright 2013 Verilux, Inc. All rights reserved.

VERILUX®
The Healthy Lighting Company® Est. 1956

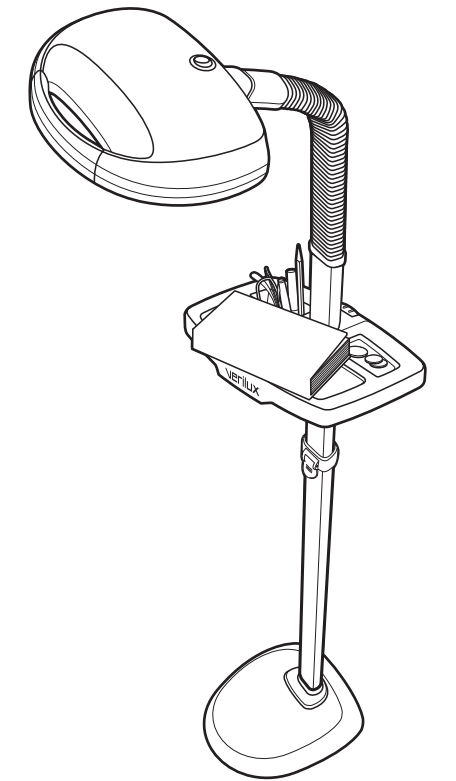

EasyFlex® | Deluxe

Natural Spectrum® Floor Lamp

Model: VF02